


Fix Frame Rate Instruction

1st Step: Disable your pc webcam

Here is example of my computer:




my computer → click the right button of the mouse
→ “Device Manger” → Disable your pc webcam

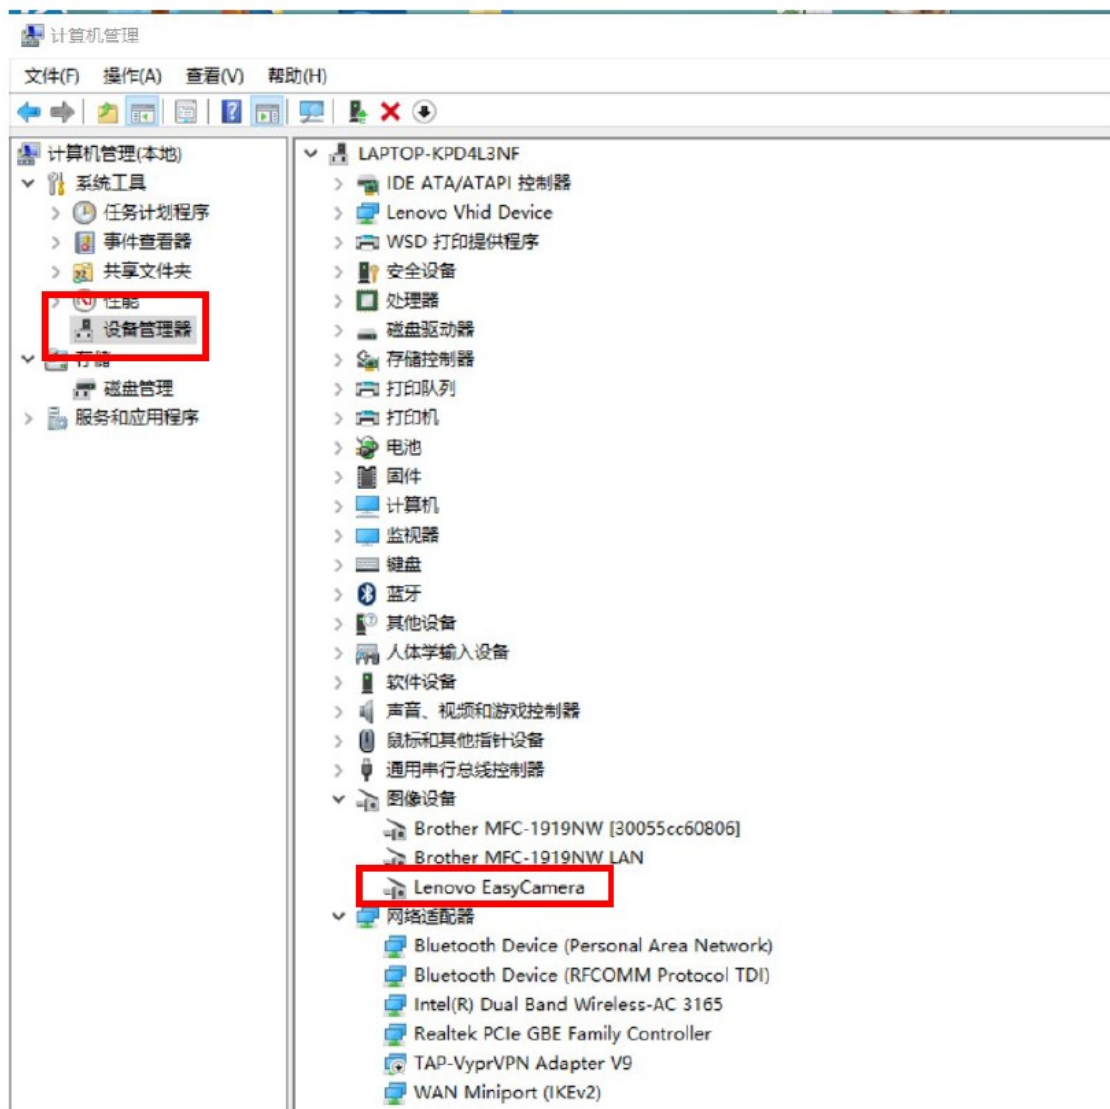



2nd Step: Plug our usb camera into the usb port of your computer

3rd Step: Run software “SFWriteTool_AIIC_v1028r”

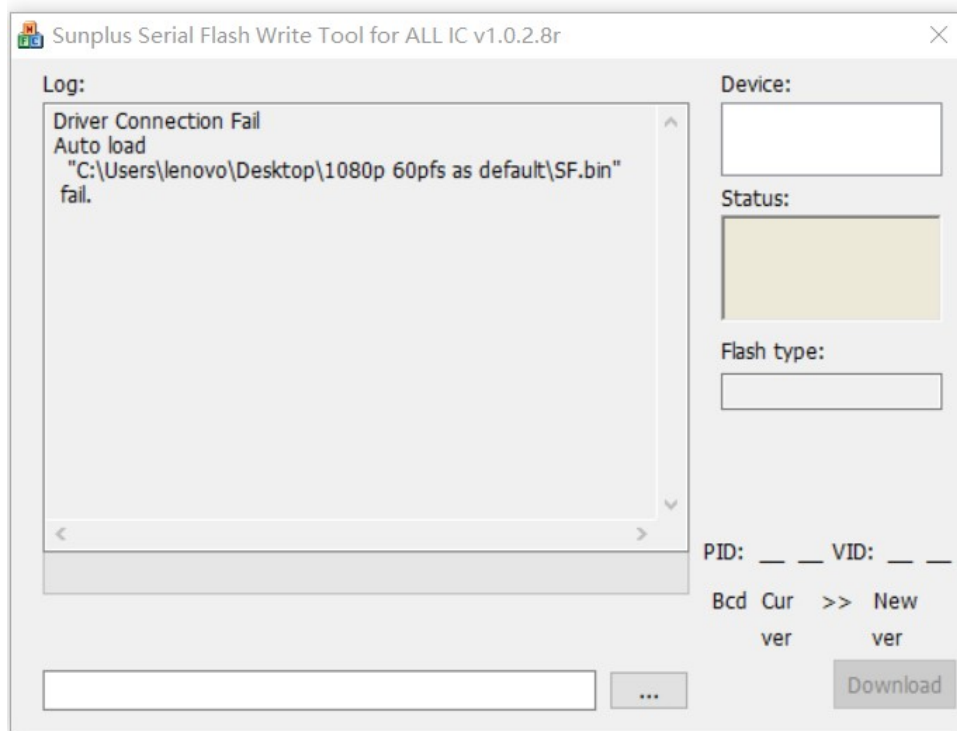


Load file “fix fram rate.bin”

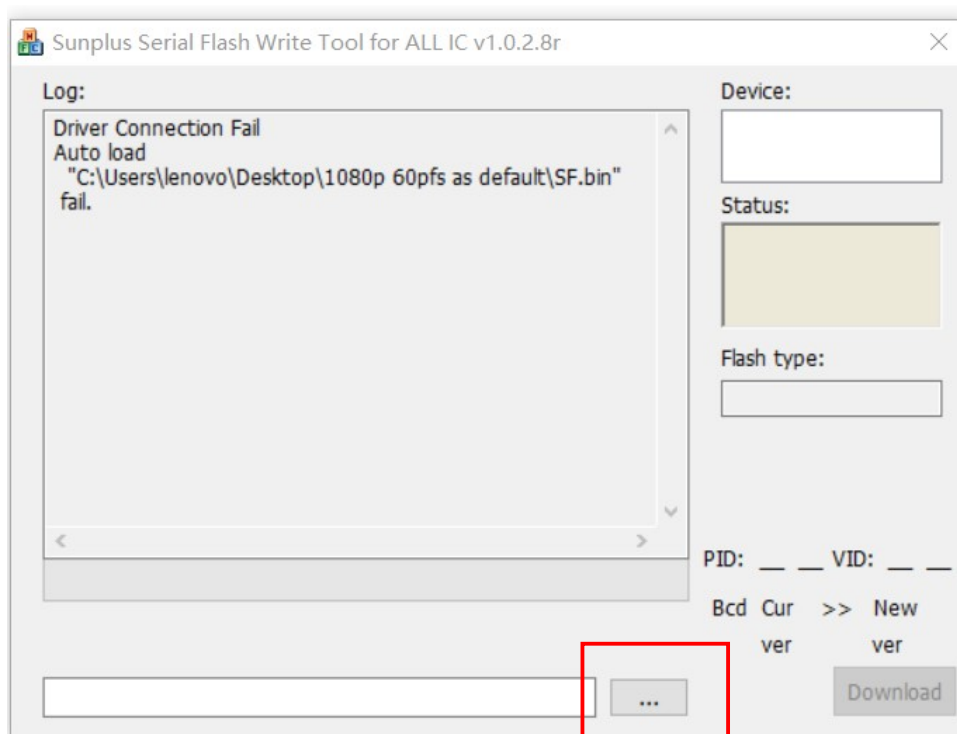

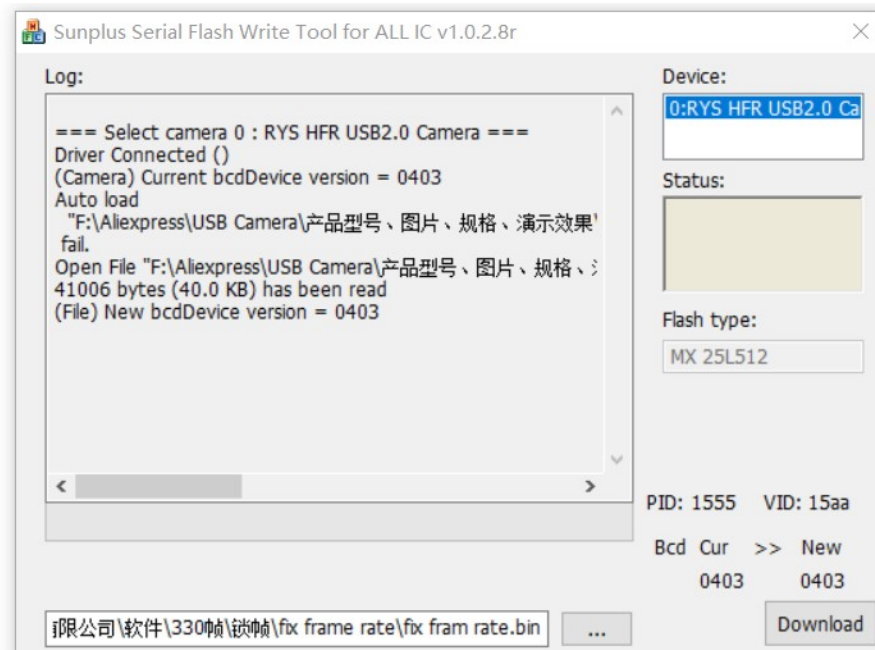

Click button "Download"

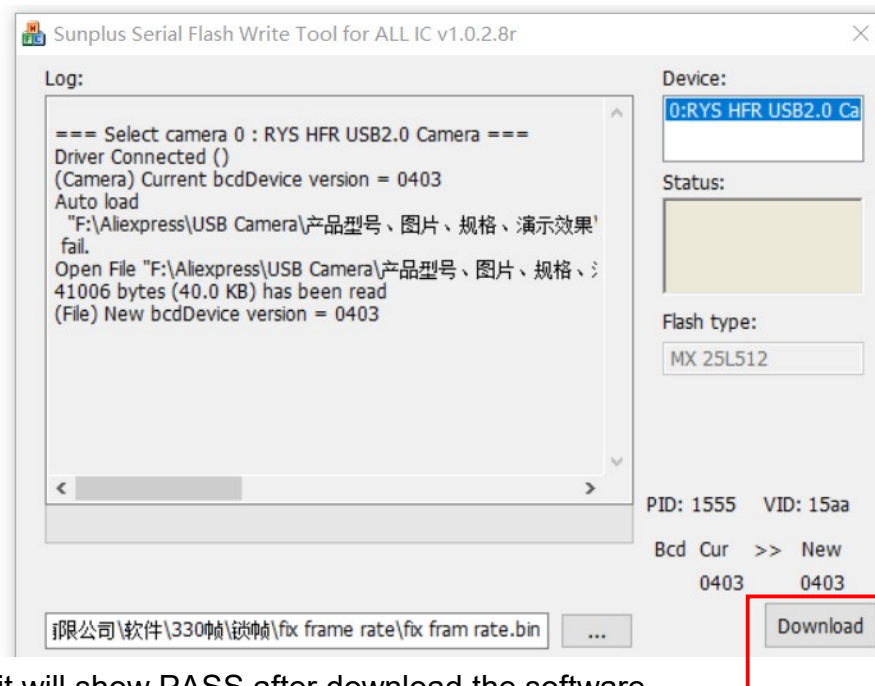

it will show PASS after download the software.

4th Step: Check if the camera setting active or not.

Plug off the usb camera,

Then re-plug the usb camera into the usb port of your computer to see if the camera setting active or not.

5th Step: Active your pc webcam, same as 1st step.